




1. Press to fix the suction bases on flat & smooth surface

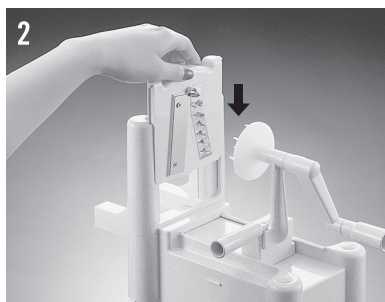


2. Select & insert the blade




3. Store the rest of the blades





4. Cut a section of the food & fix its flat surface to the food holder

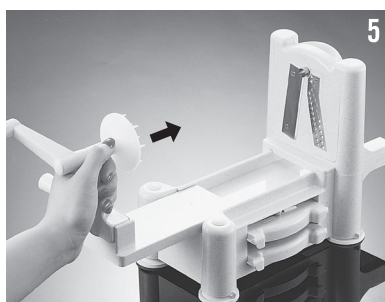

5. Always affix the food in the middle

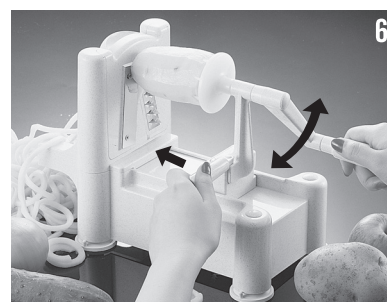

6. Push handle forward while rotate another handle clockwise

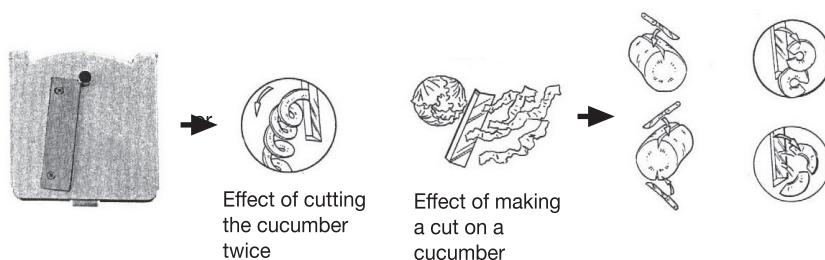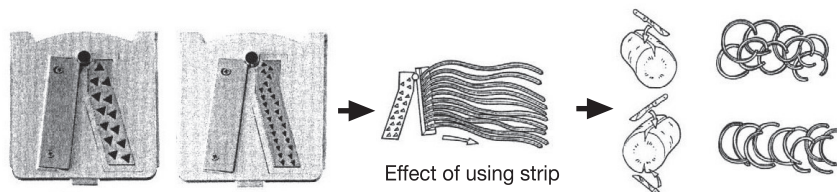

CAUTION

- SHARP BLADES! KEEP AWAY FROM CHILDREN!
- USE, WASH & STORE WITH CARE
- USE THE FOOD HOLDER FOR SAFETY

- CUT FOOD INTO SMALL PIECES TO FIT FOOD HOLDER
- TOP RACK DISHWASHER SAFE, KEEPING TEMPERATURE BELOW 65°C / 150° F
- AVOID EXCESSIVE USE OF DETERGENT