

说明书尺寸为：135×97.5MM

97.5 mm

135.0 mm

TROUBLESHOOTING

FAULT	REASON	SOLUTION
Kettle didn't work properly	Power connection isn't in place	Power properly connected
	Prevent dry heating automatic protection startup	Disconnect the power supply, wait for after cooling kettle again operation
Boil water automatically disconnect before the power switch	Scale too thick	Thoroughly dirt-remover
	Improper operation or too little water	Right, correct operation water
Boil water after the power switch long time don't automatically disconnect	Mesh not installed correctly	Properly installed mesh
	Lid didn't cover with tight	Cover tight lid
Water has plastic flavour	New pot use plastic flavout has slight	Will the water boils, repeat for two more out
		Add water to limit line, well, will add 5 grams soda water boil fell, and then rinsePour water boiling kettle, again
Boil water power not reset after a period of time	Prevent dry heating protect not reset	The power supply switch according to disconnect position, waiting for 5 minutes, then add cold water and cool kettle points Clock can

WARRANTY CARD

WARRANTY REGULATIONS

1. This product since the purchase date ,hang the warranty service
2. The warranty period for product quality problem, the zero department are damaged, out company free replacement shia.
3. If the product more than the warranty, need maintenance, the company only charge the spare parts fee.
4. Product warranty (change), must provide the warranty card and purchasing invoice is valid.
5. One of following cases, is not within the scope of warranty (change):
- (1) consumer is used undeserved (2) consumers use undeserved not according to specification requirements (3) connect the power by moving or fall after installation caused by fault or damaged (4) because accident or accident (fire, flood, gas accidents) damage (5) used for business activities (business activities, abnormal environment use etc) damage. (6). in case if the power rate changes (7). in case if the kettle (appliance) is used without any water inside.

THE WARRANTY (CHANGE) A REGISTRATION FORM

Customer name: _____ Product name: _____ Type: _____

Fuselage number: _____ Buy address: _____ Purchase date: _____

fault phenomenon	fault reason	Processing results O Guarantee to change O warranty O maintenance	Maintenance records	Maintenance signature

FIND IT Import & Export S.L. Tel.: +34 985 21 73 05 info@fimex.es
www.nerthus.com.es

NERTHUS
KITCHENWARE

ELECTRIC KETTLE



Please read the manual carefully prior to use

INTRODUCTION

Using the electric kettle.anyone start before, please read the instruction for use, please keep this instruction manual, ready to refer to.

PRODUCT FEATURES

Wireless fast, adopts advanced electric kettle.anyone craft careful manufacturing, appearance beautiful generous, automatic control mode is unique, high thermal efficiency, safety, saving time quick, burning electricityWater no pollution, accord with water hygiene standards.

NOTES

1. This product only for family use
2. Power must have grounding device, in order to protect security
3. Before the power supply in on products, please check the product shows that the voltage of power supply (220V ~, 50Hz), and local voltage is consistent:
4. Please use the voltage marked with kettle for not less than 10 rated current of electrical outlet, do not use usb socket and other appliances used at the same time.
5. If this product's power supply cord damage, to avoid danger, must by factory or its maintenance or similar full-time personnel to replace:
6. Please will move further away from the base kettle water operation, kettle placed exactly block front must dry the kettle bottom or.
7. No one can use electric kettle.anyone presence.
8. Do not send kettle placed in children or the mentally handicapped, the place which can touch, in case the burns.
9. Please put the kettle on and placed on the desktop, flat heat-resisting parallel plane near heat sources, do not send kettle placement. Do not send any electric kettle placed near or above;
10. Work, only through holding the handle to operate, boil water, boil water to cover the lid don't uncover lid, process, don't touch the pot of the body, and to be on the alert The place such as plugged or lid escaping steam,just burn.
11. Against the kettle, the power cord, power plug or base submerged in water or other liquids, lest produce risk.
12. Please do not let the power cord hang at the desk, or contact with sharp edges edge Angle or contact with high temperature object.
13. Appear the following situations, do not turn on the power: without water to strain, water, strain when not in use, cleaning or mobile electric kettle anyone, when electric kettle.anyone malfunction.
14. The products are only for the boil water use, please do not heating other liquid to avoid any damage.
15. Electric kettle.anyone if malfunction, please products will be sent to the company authorized service center for repairs, forbidden automatic apart maintenance:
16. Electric kettle.anyone shape.mental base supporting the use of the pitcher body mold, do not use other base for supporting, do not use the our company designated parts.

BEFORE USING THE GUIDELINES

1. Electric kettle.anyone demolition package. 2. Check that are standard voltage pitcher body mold plates with you will use the voltage of power supply is consistent;3. Please use a protection to ensure that the power supply, the grounding of personal safety. 4. Must ensure that power plug in when insertion absolutely dry. 5. Pitcher body mold must cooperate to use with the base.6. First before use without using or long-term before use, should put again, add water to maximum water pot and bring to a boil, then pour out the water, not for drinking water. Repeat for the second, with clean, protect healthy pitcher body mold.

METHOD OF USE

1. Before the power switch, please add water according to disconnect position;
2. Water added by the cap: please don't beyond water line, and maintain a horizontal position, if water pot than water, boil water cap line may overflow; If low water In lower water line, the kettle didn't work properly.
3. Add good water back cover good lid.
4. The base paper-cover must be placed on the appropriate supporting the pedestal, connect the power supply, correctly placed in the shelf on the kettle, note source is connected device properly connected in position.
5. The power supply switch according to connect position, indicator that kettle. Already electrify When the water boiling after certain hours will be cut off power supply, lights extinguished.
6. If the water boiling to cut off power before but just need to press the switch.

CLEANING METHOD

1. Must disconnect the power, to clean again after cooling kettle.
2. Do not send kettle, base, and the power cord, plug soaked in water, lest appliances Water, produce risk.
3. The base of the external usable cleanness kettle of wet cloth to wipe, do not use organic solvents Wipe.
4. Kettle water can be added inside, with soft cloth, soft brush cleaning.
5. To guarantee the normal work, should be regularly kettle for kettle dirt-remover. In the daily two POTS of Cases, with low water hardness, where once every two months, should be dirt-remover For the high quality hard parts, each month should dirt-remover again. If the waterBoiling automatically disconnect before switch, should consider the timely removal.
6. Are not allowed to use metal or other giant-cell advance, should use a special tool scale Scrubbing, suggest using dilute lemon water or amount to clean.